

mini kettle

Capresso

Model #280.01

**Operating Instructions
Warranty**



650 Watts / 120 V / 60 Hz

Read this manual thoroughly before using and save it for future reference

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be taken, including the following:

1. READ ALL INSTRUCTIONS.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electric shock and injury to persons, DO NOT IMMERSER CORD, PLUG, OR POWER BASE UNIT in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not use harsh abrasives, caustic cleaners or oven cleaners when cleaning this appliance.
7. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
8. The use of accessory attachments not recommended by Capresso may result in fire, electric shock, or injury to persons.
9. Do not use outdoors.
10. Always use the appliance on a dry, level surface.
11. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
12. Do not place on or near a hot gas or electric burner, or in a heated oven.
13. Do not leave the appliance unattended when in use.
14. Always fill the kettle first then plug cord into outlet. To disconnect, turn power off then remove plug from wall outlet.
15. Do not use this appliance for other than intended use.
16. Always make sure that lid is closed during operation. Scalding may occur when lid is open during operation.
17. To avoid scalding, never fill pot above the "MAX" line marking on the kettle.
18. This kettle is designed to boil water, do not put any other liquid into the kettle.
19. Extreme caution must be used when moving the kettle containing hot water.
20. Unplug the kettle before filling or pouring.

**FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS**

SPECIAL CORD SET INSTRUCTIONS

Regarding your cord set:

1. A short power supply cord is provided to reduce the risk of becoming entangled in or tripping over a long cord.
2. Longer extension cords are available and may be used if care is exercised in their use.
3. If an extension cord is used,
 - a. the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and
 - b. the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.
 - c. If the appliance is of the grounded type, the extension cord should be a grounding type 3-wire cord

Notice: This appliance has a 3-prong grounded plug. To reduce the risk of electrical shock, this plug will fit in an outlet only one way. If the plug does not fit in the outlet, contact a qualified electrician. DO NOT modify the plug in any way.

Welcome and Thank You

Thank you for choosing the Capresso Mini Kettle. The Capresso water kettle boils water faster, safer and more energy efficiently than your stovetop. Water heats quickly, when it reaches boiling it shuts itself off. The Mini Kettle is easy to operate and compact in size.

Capresso Customer Service

Should you require further information or if particular problems occur that are not covered in this manual, please

- CALL our toll free HELP LINE: 1-800-767-3554 Monday-Thursday 8:00AM to 9PM, Friday 8:00AM to 8PM and Saturday 9AM to 5PM Eastern Time Zone. Feel free to call at any time. If you are connected to our voicemail, PLEASE DO NOT HANG UP. Leave your name, telephone number and time to call back. Please leave the name or model number of your Capresso product, in this case it is Mini Kettle, model #280.01
- FAX us at 1-201-767-9684 • E-MAIL us at contact@capresso.com
- VISIT our website at www.capresso.com

Ordering Parts & Accessories

- Please go to our website www.capresso.com to register your product and to order any additional parts and accessories

Fig. 1



Fig. 2

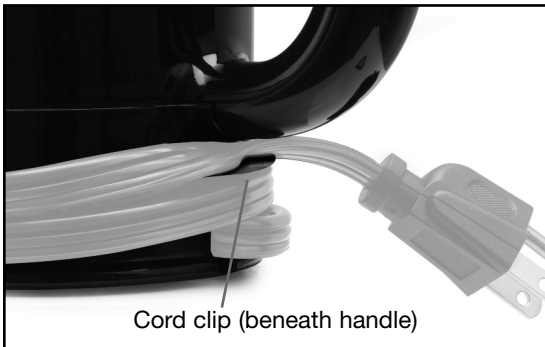


Fig. 3



Please Don't!

- Never boil water while the lid is open. Hot steam may cause injuries and may damage wooden panels in your kitchen.
- Avoid contact with steam coming out of the spout when the unit is boiling or when pouring hot water.
- Never try to remove the lid.
- Before opening the lid make sure the water is not boiling.
- Never fill kettle with anything but water.
- Make sure the kettle is switched off before lifting or pouring.
- Do not add instant soups or any other soluble to the kettle.
- Do not use the kettle to thaw food of any kind.
- Do not use the kettle to make sauces or to melt cheese, butter or any other items.
- Never immerse the kettle in any liquid. Never put kettle in the dishwasher.
- Always unplug your kettle when not in use.

Before Using for the First Time

Read all Important Safeguards and operating instructions before using this kettle. Discard the first filling of boiling water to remove any dust and residues from the manufacturing process.

Operating Instructions

1. Open the lid by pulling back on the lid release (Fig. 1, B). DO NOT bend lid past its opening point or try to remove the lid!
2. Fill with the desired amount of fresh cold water. The kettle has a maximum level marking. Never overfill the kettle past this marking.
CAUTION / DANGEROUS: Never fill above the MAX line. If you fill above the MAX line, boiling water will push out of the pouring spout. This can cause severe injuries and burns.
3. Close lid and ensure it is locked into place.
4. Plug cord into outlet.
5. Gently push the on/off switch upwards into the "I" position. The red indicator light will turn on and the kettle begins to heat water. The warmer the water becomes the more you will hear the noise of the water heating up.
6. When the water comes to a boil the kettle will turn off automatically, the "I" switch will click off and the indicator light will shut off.
7. To re-boil, wait a few minutes as the on/off switch needs time to reset.
8. The kettle can be turned off during boiling by pressing the on/off switch to the "O" position.
9. Always unplug the kettle after use.

Note: If you are packing the kettle for travel, always allow the kettle to completely cool down and completely dry all water from kettle before packing.

Helpful Hints:

- Never try to boil water with the lid open.
- Do not leave water standing in the kettle. Discard unused water.
- If the kettle is "ON" without water, the kettle will automatically turn off (the red indicator light will turn off, but the switch will NOT jump back). Push the control upward to the complete OFF position.

Dry Boil Shut-Off Protection

If you turn the kettle on without water in the kettle, the heater will shut off after a few seconds. Allow the kettle to cool down before filling with water.

Cleaning

- Always unplug the cord from the outlet before cleaning.
- Wrap the cord around the kettle and secure using the cord clip. (Fig. 2)
- Make sure kettle is cold.
- Removable scale filter located in the spout can be pulled up and out for cleaning. (Fig. 3) Run the filter under hot water and rub with a cleaning cloth or brush. Place scale filter back into spout after cleaning and drying.
- Clean the exterior surface with a clean, damp, soft cloth.
- Never use abrasive cleaners, steel wool, chemical cleaners or scouring agents to clean the kettle.
- Rinse out kettle and wipe dry with a soft, lint-free cloth.

Attention:

- Over time the metal on the inside of the kettle may change color slightly. This is caused by the intense heat of the heating element, especially if the kettle was turned on repeatedly without water. This will not diminish the performance of the kettle in any way.
- If your water has a high calcium content, calcium deposits might dull the inside. Follow the instructions below for decalcification.

Decalcification

Hard water can leave calcium spots inside the kettle that can slow down boiling time. Use a commercial descaling agent, like Capresso Cleaning Solution and follow the instructions that come with the agent.

NOTE: Make sure kettle is cold.

Use of Capresso Cleaning Solution

Dissolve half a packet ($\frac{1}{2}$ oz or 14 g) of Capresso Cleaning Solution with 16 oz. (0.5 L) of water and pour mixture into kettle. Allow mixture to sit inside the kettle for 20-30 minutes. Pour water and Cleaning Solution out and rinse the kettle 2-3 times with fresh, clean water. DO NOT heat the kettle while descaling with Capresso Cleaning Solution.

Use of Vinegar

You can also use white vinegar to descale the inside of the kettle. Fill the kettle with 1 cup of water (8 oz) and add 3 tablespoons of white vinegar. Bring to a boil. Discard the solution and repeat if necessary. Rinse the kettle once or twice with fresh cold water.

Any other servicing should be performed by an authorized service representative.

Troubleshooting

Kettle switches on and off during use or turns off before boiling is complete.

- *Check that the heating element is free of any limescale build up.*
- *Regularly descale the kettle as described in Decalcification section.*
- *Check that enough water was added to the kettle before boiling.*

Limited One-Year Warranty

This warranty covers your CAPRESSO machine, Mini Kettle, Model #280.01. The model # can be found on the bottom of the machine. This warranty is in effect for one year from the date of the first consumer purchase. This warranty covers all defects in materials or workmanship (parts and labor).

This warranty does not cover:

- Any machine not purchased from an Authorized CAPRESSO Dealer.
- Commercial use of machine.
- Damage caused by accident, abuse, negligence, misuse, improper operation or failure to follow instructions contained in this manual.
- Damaged caused by neglecting and omitting maintenance, cleaning and decalcifying.
- Any service or alteration performed by an unauthorized person, company, or association.

Other limitations and exclusions: Any implied warranties including fitness for use and merchantability are limited in duration to the period of the express warranty set forth above and no person is authorized to assume for JURA any other liability in connection with the sale of the machine. JURA expressly disclaims liability for incidental and consequential damages caused by the machine. The term "incidental damages" refers to the loss of the original purchasers' time, loss of the use of the machine or other costs relating to the care and custody of the machine. The term "consequential damages" refers to the cost of repairing or replacing other property which is damaged when this machine does not work properly. The remedies provided under this warranty are exclusive and in lieu of all others. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Customer Service

Capresso Mini Kettle, Model #280.01 Product Registration

Please go to our website www.capresso.com to register your product. Your information will help us to better serve you.

Customer Service

1-800-767-3554

Mon-Thu 8AM – 9PM • Fri 8AM – 8PM • Sat 9AM – 5PM
Eastern Standard Time.

email: contact@capresso.com

JURA Inc.

20 Craig Road, Montvale, NJ 07645

201-767-3999 • Fax: 201-767-9684

Website: www.capresso.com

JURA Inc.

20 Craig Road, Montvale, NJ 07645

201-767-3999 • Fax: 201-767-9684

Website: www.capresso.com