

Capresso

H₂O PRO

Programmable Cordless
Water Kettle with Variable
Temperature Control



Model
#275 / #276

- Operating Instructions
- Warranty

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be taken, including the following:

1. READ ALL INSTRUCTIONS.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electric shock and injury to persons, DO NOT IMMERSE CORD, PLUG, OR POWER BASE UNIT in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by Capresso may result in fire, electric shock, or injury to persons.
8. Do not use outdoors.
9. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. To disconnect, remove kettle from Power Base, then remove plug from wall outlet.
12. Do not use this appliance for other than intended use.
13. Always make sure that lid is closed during operation. Scalding may occur when lid is open during operation.
14. To avoid scalding, never fill pot above the "MAX" line marking on the kettle.
15. Extreme caution must be used when moving the kettle containing hot water.
16. FOR HOUSEHOLD USE ONLY.

SAVE THESE INSTRUCTIONS

SPECIAL CORD SET INSTRUCTIONS

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

1. A short power supply cord is provided to reduce the risk of becoming entangled in or tripping over a long cord.
2. Longer extension cords are available and may be used if care is exercised in their use.
3. If an extension cord is used,
 - a. the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and
 - b. the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

H₂O PRO

Programmable Cordless Water Kettle with Variable Temperature Control

- A Lid with push button release; lid is not removable
- B Spout with removable scale filter
- C LCD display with four operating buttons (see Fig. 2)
- D Water level window with MIN/MAX markings
- E Stay cool handle with display and controls
- F Concealed heating element
- G Power Base with plug and cord storage

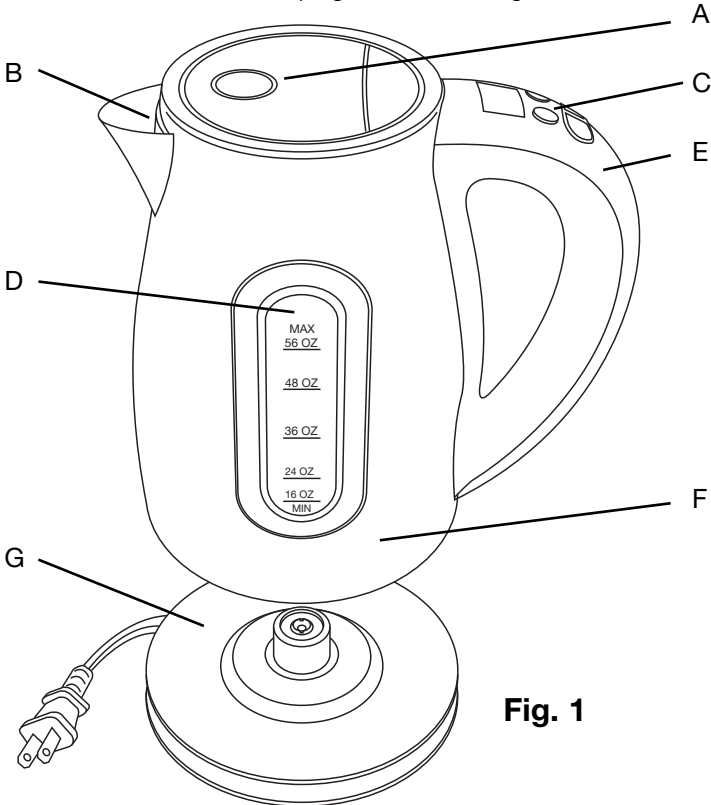 


Fig. 1

**CAUTION: Handle kettle carefully,
the metal housing will become hot during and after heating!**

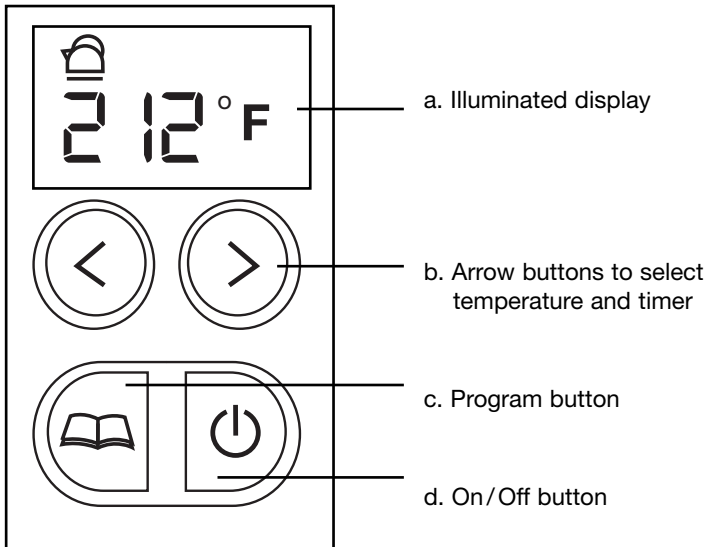 


Fig. 2

Default setting

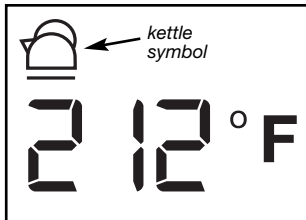 


Fig. 3a

Warm keeping setting (default)

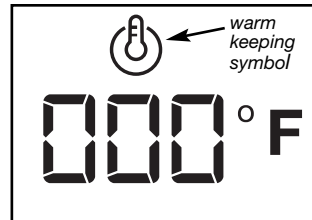 


Fig. 3b

Chlorine setting (default)



Fig. 3c

Timer symbol with 3 second boil setting (default)

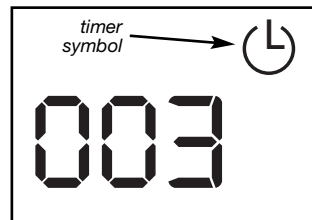 


Fig. 3d

WELCOME TO THE CAPRESSO H2O PRO CORDLESS WATER KETTLE

The Capresso water kettle boils water faster, safer and more energy efficiently than your stovetop. Water heats quickly. When it reaches the selected temperature it shuts itself off. The Capresso water kettle is easy to operate. The universal power base is ideal for left or right hand use. The display shows you when the kettle is heating up, is in warm-keeping mode or if the kettle is off.

The variable temperature control (110°F to 212°F), the warm-keeping feature (110°F to 190°F), a chlorine reducing setting and an extra long boiling setting let you heat your water for any kind of application. The large capacity (up to 56 oz.), a dry boil detection and the safety auto-off feature make the H2O PRO the safest and most versatile kettle on the market today.

CUSTOMER SERVICE

Should you require further information or if particular problems occur that are not covered in this manual, please call our toll free HELP LINE: 1-800-767-3554 from Mon-Thu 8AM – 9PM • Fri 8AM – 8PM

- Sat 9AM – 5PM Eastern Time Zone.

If you call at any other time, please leave a message with your telephone number and when we can call you back. You can also send us a fax at 1-201-767-9684 or e-mail us at contact@capresso.com

PLEASE DON'T!

- Never boil water while the lid is open. Hot steam may cause injuries and may damage wooden panels in your kitchen.
- Never try to remove the lid.
- Before opening the lid make sure the water is not boiling.
- Never fill kettle with anything but water.
- Do not add instant soups or any other soluble to the kettle.
- Do not use the kettle to thaw food of any kind.
- Do not use the kettle to make sauces or to melt cheese, butter or any other items.
- Never immerse the kettle in any liquid. Never put kettle or base in the dishwasher.

BEFORE USING FOR THE FIRST TIME

Read all Important Safeguards and Operating Instructions before using this kettle. Discard the first filling of boiling water to remove any dust and residues from the manufacturing process.

1. TO BOIL WATER (default setting)

1. Remove kettle from base.
2. Push the button on the lid (Fig. 1A). The lid opens itself.
3. Fill with the desired amount of fresh cold water. The kettle has minimum and maximum markings. Never underfill or overfill the kettle.

CAUTION / DANGEROUS: Never fill above the MAX line. If you fill above the max line, boiling water will push out of the pouring spout. This can cause severe injuries and burns.

4. Close lid.
5. Place kettle on Power Base (Fig. 1G).
6. Plug cord into outlet. The display illuminates and shows the kettle symbol and 212°F (Fig. 3a).
7. Push the On/Off button (Fig. 2d). The kettle symbol will blink, indicating that the kettle is heating the water. The warmer the water becomes the more you will hear the noise of the water heating up.
8. When the water comes to a boil the display will switch from the kettle symbol to the timer symbol (Fig. 3d). The timer symbol will blink for three seconds (default). Then the display changes back to the kettle symbol (not blinking) and the heater shuts off.
9. Lift kettle from base and pour water out slowly. For different settings see chapters 4, 5 and 6.

2. DRY BOIL SHUT-OFF PROTECTION

If you turn the kettle on without water in the kettle, the heater will shut off after a few seconds. The display will go blank. Once the kettle has cooled down, the display will come back on again. This can take several minutes. To speed up this process you can fill some cold water into the kettle. You will hear a clicking noise. This indicates that the thermostat has reset itself. If you place the kettle back on the power base, the display will show the default setting again (Fig. 3a).

Please note: AUTO-OFF. The kettle will always shut-off after the selected temperature has been reached.

3. TURNING THE KETTLE OFF

There are two ways to turn off the kettle:

- a) During operation, push the On/Off button. This will not erase any programmed settings as long as the kettle sits on the base.
- b) During operation, lift the kettle off the base. This will turn off the kettle and erase any personal setting. You will need to select your personal setting again.

4. VARIABLE TEMPERATURE CONTROL

According to tea experts certain teas should not be steeped with boiling water (i.e. Green Tea should be steeped between 170°F and 185°F, most Oolong teas should be steeped between 190°F and 200°F degrees, water for French Press coffee should not be hotter than 200°F.

- Fill your kettle with the desired amount of cold fresh water. Place on power base. The display shows the default setting (Fig. 3a).
- Use the arrow buttons (Fig. 2b) to select any temperature between 110°F and 200°F in 10°F increments (110°F, 120°F and so forth) or 212°F.
- Push the On/Off button (Fig. 2d). The kettle will heat the water to the desired temperature and then shut off. The display will show the selected temperature and the kettle symbol will stop blinking.

When you remove the kettle from the base and replace it, the default setting 212°F will be displayed.

5. WARMKEEPING

The warm-keeping feature can be used in two ways:

- a) to keep water at a certain temperature after it has reached the desired temperature.
 - b) to first boil the water and then bring it down to the desired temperature.
- The display shows the default setting (Fig 3a).
 - Push the program button once (Fig 2c). The display will show the warm keeping symbol and 000°F.
 - Push the arrow buttons (Fig. 2b) to select the warm-keeping temperature between 110°F and 190°F.

Please note: the warm-keeping temperature cannot be set higher than the

selected heating temperature, i.e. if the selected heating temperature is set to 160°F, the warm-keeping temperature can be set between 110°F and 160°F.

Please note: if the selected heating temperature is set to 212°F or 200°F degrees the warm-keeping temperature cannot be set higher than 190°F.

After the selected heating temperature is reached, the display will now change to the preselected warm-keeping temperature. The warm-keeping symbol and the warm-keeping temperature are displayed. Once the water cools to approx. 10°F below the pre-set warm-keeping temperature, the heater will automatically start re-warming the water to the pre-set temperature. During this time the warm-keeping symbol will be blinking. The kettle will keep the selected temperature for up to 40 minutes. After 40 minutes the warm-keeping symbol stops blinking indicating that the heating element has shut off.

Please note: once you remove the kettle from the power base, all pre-sets are cancelled.

Tip: If you want to pour water immediately after brewing and then keep the rest at a certain temperature, proceed as follows:

- Follow the instructions under chapter 1 or 4.
- Pour the desired amount of water.
- Replace the kettle.
- Select the brewing temperature by pushing the arrow buttons.
- Push the program button once to show the warm-keeping display 000°F. Use the arrow buttons to select the desired warm-keeping temperature.
- Push the On/Off button.

The kettle is now on. Depending on the temperature of the water it will either re-heat the water immediately or later.

6. CHLORINE REDUCING SETTING / EXTENDED BOIL SETTING

If you boil the water in the default setting, the kettle will shut off 3 seconds after the sensor registered the boiling temperature. You can prolong the actual boiling action as follows:

- Set the Chlorine symbol to “CL”, this will add three extra seconds to the boiling of the water.
- Change the Timer Setting from 003 (seconds) to any duration up to 20 seconds (020).
- Prepare the kettle as explained in chapter 1.
- Before you push the On/Off button, push the program button twice, the Chlorine symbol appears (Fig. 3c).

- Push either arrow button once, the display shows “CL”.
- Push the program button again. The display shows the timer symbol and 003 (Fig. 3d).
- Push the arrow button to select up to 20 seconds.
- Now push the On/Off button. Once the boiling temperature is reached the kettle will keep boiling the extra three seconds from the CL setting plus the seconds set with the timer.

Please note: once you remove the kettle from the base all settings will return to the default (see Fig. 3).

7. CLEANING

- Always unplug cord of power base before cleaning.
- Make sure kettle is cold.
- Clean the exterior surface with a clean, damp, soft cloth.
- Never use abrasive cleaners or scouring agents.
- Rinse out kettle.

Attention:

- Over time the stainless steel inside of the kettle may change color slightly. This is caused by the intense heat of the heating element, especially if the kettle was turned on repeatedly without water. This will not diminish the performance of the kettle in any way.
- If your water has a high calcium content, calcium deposits might dull the inside. Follow the instruction below for decalcification.

8. DECALCIFICATION

Hard water can leave calcium spots inside the kettle. Use a commercial descaling agent and follow the instructions that come with the agent.

NOTE:

Use of Vinegar

You can also use white vinegar to descale the inside.

- Fill the kettle up to the desired level with water.
- For each 2 cups of water (16 oz) add 6 tablespoons of white vinegar.
- Bring to a boil.
- Discard the solution and repeat if necessary. Let the kettle cool down and rinse the kettle once or twice with fresh cold water.

LIMITED ONE-YEAR WARRANTY

This warranty covers covers your CAPRESSO water kettle, model numbers 275/276. The model # can be found on the bottom of the kettle or the bottom of the power base. This warranty is in effect for one year from the date of the first consumer purchase and is limited to the United States of America. This warranty covers all defects in materials or workmanship (parts and labor).

This warranty does not cover:

- Any machine not distributed by CAPRESSO.
- Any machine not purchased from an Authorized CAPRESSO Dealer.
- Commercial use of the kettle.
- Damage caused by accident, abuse, negligence, misuse, improper operation or failure to follow instructions contained in this manual.
- Any service or alteration performed by an unauthorized person, company, or association.

Other limitations and exclusions: Any implied warranties including fitness for use and merchantability are limited in duration to the period of the express warranty set forth above and no person is authorized to assume for JURA any other liability in connection with the sale of the machine.

JURA expressly disclaims liability for incidental and consequential damages caused by the machine. The term "incidental damages" refers to the loss of the original purchasers time, loss of the use of the machine or other costs relating to the care and custody of the machine. The term "consequential damages" refers to the cost of repairing or replacing other property which is damaged when this machine does not work properly. The remedies provided under this warranty are exclusive and in lieu of all others.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

CAPRESSO CUSTOMER SERVICE:

81 Ruckman Road, Closter, NJ 07624

Help Line: 1-800-767-3554

**Mon-Thu 8AM – 9PM • Fri 8AM – 8PM • Sat 9AM – 5PM
Eastern Time Zone**

If you call at any other time, please leave a message with your telephone number and when we can call you back.

Fax: 201-767-9684

Email: contact@capresso.com

Website: www.capresso.com

Customer Service

1-800-767-3554

Mon-Thu 8AM – 9PM • Fri 8AM – 8PM • Sat 9AM – 5PM
Eastern Time Zone

contact@capresso.com

JURA Inc.

81 Ruckman Road, Closter, NJ 07624

201-767-3999 • Fax: 201-767-9684

Website: www.capresso.com

JURA Inc.

81 Ruckman Road, Closter, NJ 07624

201-767-3999 • Fax: 201-767-9684

Website: www.capresso.com